NuTone®

INSTALLATION INSTRUCTIONS
READ & SAVE THESE INSTRUCTIONS!

QuieTTest Combination

MODELS: QT100FL

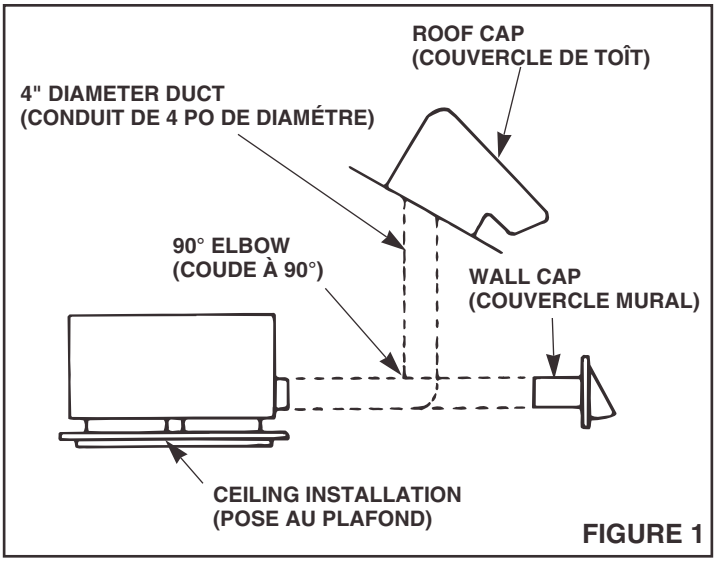

FIGURE 1

IMPORTANT SAFETY INSTRUCTIONS

WARNING: TO REDUCE THE RISK OF FIRE. ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:

A. Use this unit only in the manner intended by the manufacturer. If you have questions, contact the manufacturer.

B. Before servicing or cleaning unit, switch power off at service panel and lock service panel to prevent power from being switched on accidentally.
When the service disconnecting means cannot be locked, securely fasten a prominent warning device, such as a tag, to the service panel.

CAUTION:

For general ventilating use only. Do not use to exhaust hazardous or explosive materials and vapors.

INSTALLATION INSTRUCTIONS

WARNING: TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:

A. Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.

B. Sufficient air is needed for proper combustion and exhausting of gases through the flue (chimney) of fuel burning equipment to prevent back draft. Follow the heating equipment manufacturer's guideline and safety standards such as those published by the National Fire Protection Association (NFPA), and the American Society for Heating, Refrigeration, and Air Conditioning Engineers (ASHRAE), and the local code authorities.

C. When cutting or drilling into wall or ceiling, do not damage electrical wiring and other hidden utilities.

D. Ducted fans must always be vented to the outdoors.

E. If this unit is to be installed over a tub or shower, it must be marked as appropriate for the application.

F. **NEVER** place a switch where it can be reached from a tub or shower.

- **Suitable for use with solid state speed controls. Use NuTone Model VS-64.**
- **Not for use in kitchens.**
- **Suitable for use over a tub or shower when installed in a GFCI protected branch circuit.**

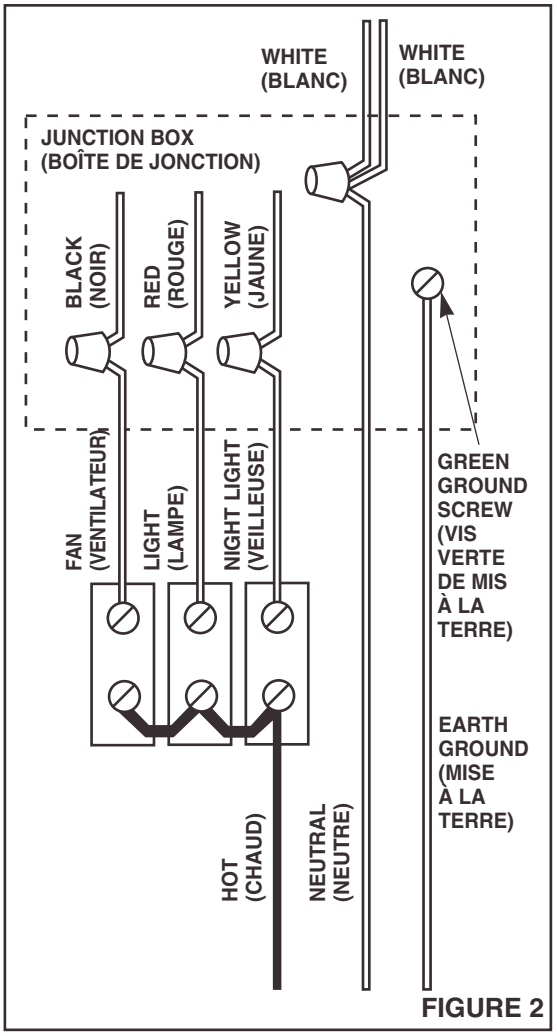

FIGURE 2

FOR BEST RESULTS

When installing the Ventilator in a **new construction site,** install housing during the rough-in construction of the building. The blower unit and grille should be installed after the finished ceiling is in place.

To install a ventilator in an **existing building** requires an accessible area (attic or crawl space) above the planned location.

INSTALLATION IN A NEW CONSTRUCTION SITE

PREPARATION

1. Remove blower/power unit assembly from housing:
   A. Loosen three (3) mounting screws.
   B. Slide unit back to free it from mounting screws.
   C. Remove unit and set aside until needed.
2. Remove one of the wiring knockouts from housing.

MOUNTING THE HOUSING

1. **Refer to Figure 3.** Insert mounting brackets at each end of housing.
2. Place long side of housing parallel to ceiling joist. Position housing in desired location. Make sure housing flange is even with the planned finished ceiling.
3. Use screws or nails (not provided) to secure mounting brackets to ceiling joists.
4. **Refer to Figure 1.** Use 4" round duct to discharge the ventilator to the outside.

   IMPORTANT: Be sure nothing obstructs the discharge of the ventilator. Make sure that insulation does not get into the duct work or into the fan.

WIRING

Refer Figure 2.

1. Run 120v AC house power wiring (with ground) through switches to junction box in ventilator housing.
2. Remove ventilator junction box cover.
3. Connect two white wires from fan and light receptacles to the common (white) supply wire. Connect the black wire from fan receptacle to the hot wire from the fan switch. Connect the red wire from the light receptacle to the hot wire from the light switch and the yellow wire to the hot wire from the night light switch.
4. Connect supply ground wire to green ground screw.
5. Replace junction box cover.

NOTE: BE SURE VENTILATOR AND SWITCH ARE PROPERLY GROUNDED. ALL WIRING MUST COMPLY WITH LOCAL ELECTRICAL CODES.

POWER/BLOWER UNIT INSTALLATION

1. Plug motor and lamp plugs into receptacles on junction box cover.
2. Position power unit mounting plate over mounting screws in housing.
3. Slide unit forward until the gasket fits firmly against discharge opening in housing and mounting screws are seated in narrow end of keyhole slots.
4. **Refer to Figure 3.** Securely tighten screws.
5. Install 26 watt fluorescent lamps (dulux D26W/27K) and 7 watt, type C night light.

GRILLE INSTALLATION

1. **Refer to Figure 3.** Snap grille mounting springs' center loop into notched bosses on the back of grille.
2. Place grille mounting springs into slots in power unit mounting plate.
3. Press grille firmly into place against the ceiling.

INSTALLATION IN EXISTING CONSTRUCTION

Installing the vent, light and night light in an existing house requires an accessible area (attic crawl space) above the planned installation location.

Review “INSTALLATION IN A NEW CONSTRUCTION” and follow all instructions which apply to your installation.

Location – locate ventilator parallel to a ceiling joist.

Wiring and Ducting – plan ducting and wiring before proceeding with installation.

Refer to Figure 2 for wiring and Figure 1 for ducting.

CAUTION: Check area above planned installation to be sure that:

1. Ducting can be installed.
2. Wiring can be run to the planned location.
3. No wiring or other obstructions might interfere with installation.

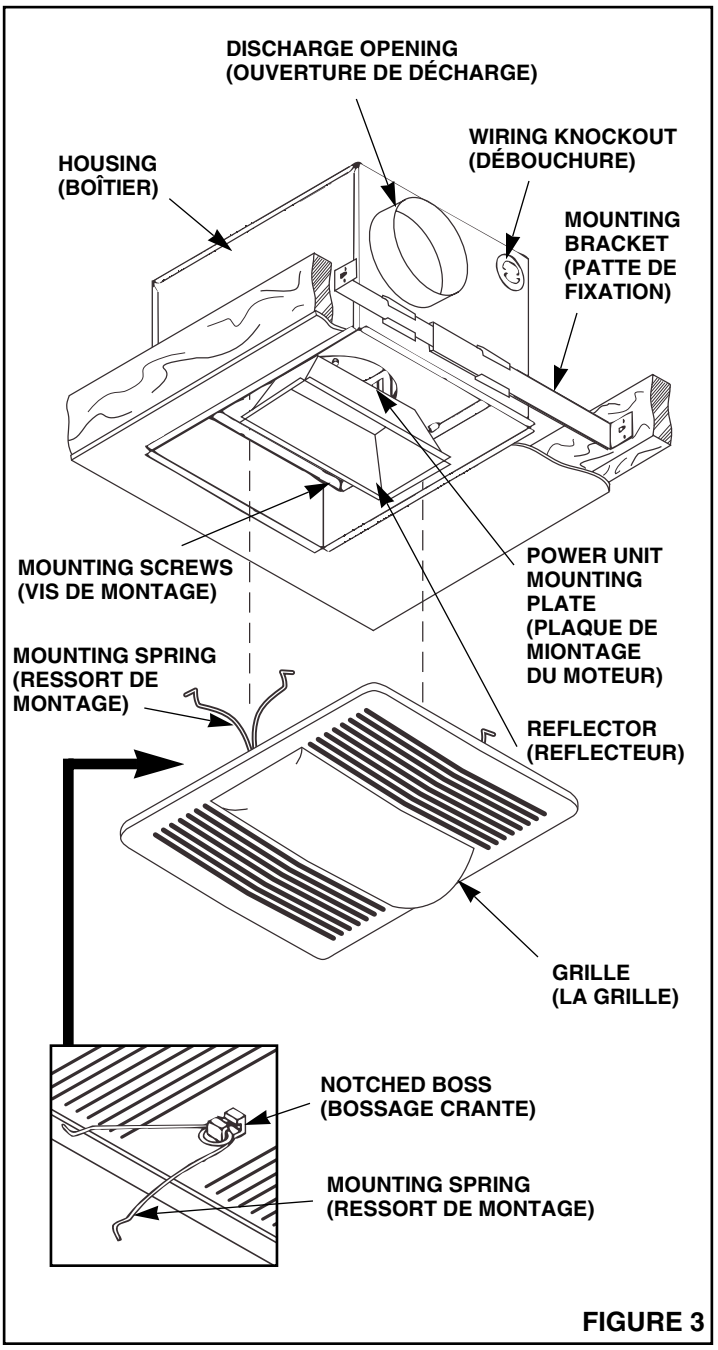

FIGURE 3

INSTALLATION FROM ACCESSIBLE AREA ABOVE

1. From below, drill a ¾" hole in ceiling at the planned location. Stick clothes hanger through hole to help locate it.
2. Locate hole in attic or crawl space.
3. In attic or crawl space, mark ceiling for cutout by using the housing as a template. The long side of cutout must be parallel to ceiling joist.
4. Make cutout along marked line.

   NOTE: If ceiling is plaster, cutout should be made from below to avoid chipping plaster.
5. Install housing, connect wiring and ducting, install power unit/blower assembly and install 26 watt fluorescent lamps (dulux D26W/27K) and 7 watt, type C night light. Then install the grille.

NuTone®

INSTRUCTIONS D'INSTALLATION
LIRE ET CONSERVER CES INSTRUCTIONS

Combinaison QuieTTest
MODÉLES: QT-100FL

Le ventilateur comprend un boîtier, des supports de montage, un couvercle de boîte de jonction, un ensemble moteur/ventilateur (moteur, roue, plaque de montage) et une grille.

- Pour utilisation avec les commandes de vitesse électroniques. Utiliser le modèle VS-64 de NuTone.
- Ne pas utiliser dans les cuisines.
- Le ventilateur ne doit pas être installé dans un plafond à isolation thermique supérieure a R-40.
- S'installe au-dessus de la baignoire ou de la douche, sur un circuit de dérivation protége para un disjoncteur de fuite à la terre.

POUR OBTENIR LES MEILLEURS RÉSULTATS

Si l'unité ventilateur-lumière-veilleuse est installée au moment de la **construction d'un nouvel édifice**, placer le carter avant les travaux de finition. Mettre la soufflante et la grille en place une fois le plafond fini.

Pour poser un ventilateur dans un **immeuble construit,** il faut un endroit accessible (grenier ou vide sanitaire) au-dessus de l'emplacement prévu.

POSE DANS UNE NOUVELLE CONSTRUCTION

PREPARATION

1. Retirer l'ensemble ventilateur/moteur de son boîtier:
   A. Desserrer les trois (3) vis de montage.
   B. Déplacer le moteur vers l'arrière pour le libérer des vis de montage.
   C. Sortir le moteur et le mettre de côté pour plus tard.
2. Enlever une des débouchures de raccordement de boîtier.

MONTAGE DU BOÎTIER

1. **Voir la Figure 3.** Insérer les pattes de montage à chaque extrémité du boîtier.
2. Placer le côté long du boîtier parallèle à la poutre du plafond. Mettre le boîtier en position à l'emplacement désiré. Vérifier que le collet du boîtier soit de niveau avec la position de finition du plafond.
3. Utiliser des vis ou des pointes (pas fournies) pour installer les pattes de support sur les poutres du plafond.
4. **Voir Figure 1.** Utiliser un conduit rond de 4 po comme décharge extérieure pour le ventilateur.
   IMPORTANT: S'assurer que rien n'obstrue la décharge de ventilateur, et que l'isolant pénètre pas dans les conduits ni dans le ventilateur.

RACCORDEMENT ÉLECTRIQUE

Consulter la Figure 2.

1. Installer les fils d'alimentation électrique CA de 120v (avec mise à la terre) dans les interrrupteurs puis jusqu'à la boîte de jonction, dans le carter du ventilateur.
2. Renlever le couvercle de la boîte de jonction du ventilateur.
3. Brancher les deux fils blancs du ventilateur et des boîtes de lumière au dil commun d'alimentation (blanc). Brancher le fil noir de la boîte du ventilateur au fil sous tension relié à l'interrupteur de ventilateur. Brancher le fil rouge de la boîte de la lumière au fil sous tension relié à l'interrupteur de la lumière et le fil jaune au fil sous tension relié à l'interrupteur de la veilleuse.
4. Brancher le fil de mise à la terre à la vis verte de mise à la terre.
5. Remettre en place le couvercle de la boîte de jonction.

NOTE: S'ASSURER QUE LE VENTILATEUR ET L'INTERRUPTEUR SONT MIS A LA TERRE CORRECTEMENT. TOUS LES FILS DOIVENT ETRE CONFORMES AUX CODES DU BATIMENT EN VIGEUR.

POSE DE L'ENSEMBLE MOTEUR/VENTILATEUR

1. Brancher les prises du moteur et des lumières dans les fiches du couvercle de la boîte de jonction.
2. Placer le plaque de montage du moteur par-dessus les vis de montage, dans le boîtier.
3. Déplacer l'ensemble vers l'avant jusqu'à ce que le joint se cale bien en place contre l'ouverture de décharge du boîtier, et que les vis de montage soient insérées dans l'extrémité étroite des fentes en forme de trou de clé.
4. **Voir Figure 3.** Bien serrer les vis.
5. Installer une ampoule de type A, maximum 100 watts, et une ampoule de type C, maximum 7 watts.

POSE DE LA GRILLE

1. **Voir Figure 3.** Insérer la boucle centrale des ressorts de montage de la grille dans les bossages à rainures au dos de la grille.
2. Placer les ressorts de montage de la grille dans les fentes de la plaque de montage du moteur.
3. Presser la grille fermement pour la mettre en place au plafond.

POSE DANS LES IMMEUBLES CONSTRUITS

Pour installer l'unité ventilateur-lumi``ere-veilleuse dans un édifice déjà construit, on doit avoir accès à un espace libre (grenier) au-dessus de l'endroit prévu pour l'installation.

Lire les instructions "POSE DANS UNE NOUVBELLE CONSTRUCTION" et suivre toutes les instructions applicables au cas particulier.

Emplacement – placer le ventilateur près d'une de plafond.

Raccords et conduits – Prévoir l'acheminement des conduits et des raccords électriques avent la pose.

Voir Figure 2 pour les raccords et Figure 1 pour les conduits.

ATTENTION: Examiner l'espace au-dessus de l'endroit prévu pour la pose, afin de vérifier si:

1. **On peut installer les conduits ou s'il y a assez d'espace pour une ventilation appropriée.**
2. **On peut acheminer les dils èlectriques jusqu'à l'endroit prévu.**
3. **Il n'y a pas de fils ni d'autres obstacles pouvant gêner l'installation.**

POSE À PARTIR D'UN ENDROIT ACCESSIBLE AU-DESSUS

1. Par en dessous, percer un trou de ¾ po dans le plafond, à l'endroit prévu. Insérer un cintre dans le trou comme moyen de repérage.
2. Repérer le trou dans le grenier ou le vide sanitaire.
3. Dans le faux grenier, marquer l'emplacement de l'ouverture dans le plafond en utilisant le boîtier comme guide. Le côté le plus long de l'ouverture doit être parallèle à la poutre.
4. Découper le long de la ligne marquée.
   REMARQUE: Si le plafond est en plâtre, il est préférable de decouper par en dessous, afin de ne pas écailler le plâtre.
5. Poser le boîtier, raccorder les fils électriques et conduits, poser l'ensemble moteur/ventilateur et la lamps, ampoule de type A, maximum 100 watts; ampoule de type C, maximum 7 watts; installer la grille.

NuTone®

One Year Limited Warranty

WARRANTY OWNER: NuTone warrants to the original consumer purchaser of its products that such products will be free from defects in materials or workmanship for a period of one (1) year from the date of original purchase. **THERE ARE NO OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.**

During this one year period, NuTone will, at its option, repair or replace, without charge, any product or part which is found to be defective under normal use and service. THIS WARRANTY DOES NOT EXTEND TO FLUORESCENT LAMP STARTERS OR TUBES, FILTERS, DUCT, ROOF CAPS, WALL CAPS AND OTHER ACCESSORIES FOR DUCTING. This warranty does not cover (a) normal maintenance and service or (b) any products or parts which have been subject to misuse, negligence, accident, improper maintenance or repair (other than by NuTone), faulty installation or installation contrary to recommended installation instructions.

The duration of any implied warranty is limited to the one year period as specified for the express warranty. Some states do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you.

NUTONE'S OBLIGATION TO REPAIR OR REPLACE, AT NUTONE'S OPTION, SHALL BE THE PURCHASER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS WARRANTY. NUTONE SHALL NOT BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH PRODUCT USE OR PERFORMANCE. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. This warranty supersedes all prior warranties.

WARRANTY SERVICE: To qualify for warranty service, you must (a) notify NuTone at the address stated below or telephone 1/800-543-8687, (b) give the model number and part identification and (c) describe the nature of any defect in the product or part. At the time of requesting warranty service, you must present evidence of the original purchase date.

Date of Installation Builder or Installer

Model No. and Product Description

IF YOU NEED ASSISTANCE OR SERVICE:

For the location of your nearest NuTone Independent Authorized Service Center:
Residents of the contiguous United States Dial Free 1-800-543-8687
Please be prepared to provide:
Product model number • Date and Proof of purchase • The nature of the difficulty
Residents of Alaska or Hawaii should write to: NuTone Inc. Attn: Department of National Field Service, 4820 Red Bank Road, Cincinnati Ohio 45227-1599.
Residents of Canada should write to: Broan-NuTone Canada, 1140 Tristar Drive, Mississauga, Ontario, Canada L5T 1H9.

Rev. 03/2001

NuTone®

Garantie limitée d'un an

GARANTIE DU PROPRIÉTAIRE: NuTone garantie à l'acheteur original de ses produits que ces derniers seront exempts de tout défaut de matériaux et de fabrication pour une période d'un (1) an à compter de la date d'achat. **AUCUNE AUTRE GARANTIE, IMPLICITE OU EXPRESSE, N'EST DONNÉE, Y COMPRIS, MAIS SANS S'Y LIMITER, GARANTIE DE MARCHANDIBILITÉ OU D'ADAPTATION À UN USAGE PARTICULIER.**

Pendant cette période d'un an, NuTone procédera au remplacement ou à la réparation sans aucuns frais, mais à sa propre discrétion, de tout produit ou pièce jugé défectueux dans le cadre d'une utilisation normale. CETTE GARANTIE NE VISE PAS LES DISPOSITIFS D'AMORÇAGE NI LES TUBES DES LUMINAIRES FLUORESCENTS. Cette garantie ne couvre pas (a) l'entretien et le service courants ni (b) les produits et les pièces ayant fait l'objet d'un usage abusif, de négligence, d'un accident, d'un entretien ou d'une réparation non appropriée (par du personnel non autorisé par NuTone), d'une mauvaise installation ou d'une installation non conforme aux directives d'installation fournies.

La durée de toute garantie implicite est limitée à la période de deux ans précisée pour la garantie expresse. Certains états ne reconnaissent pas les restrictions relatives à la durée des garanties implicites; il se pourrait donc que cette restriction ne s'applique pas dans votre cas.

LE REMPLACEMENT OU LA RÉPARATION PAR NUTONE, À SA PROPRE DISCRÉTION, DE TOUT PRODUIT OU PIÈCE DÉFECTUEUX CONSTITUE LE SEUL REMÈDE DE L'ACHETEUR EN VERTU DE CETTE GARANTIE. NUTONE NE PEUT ÊTRE TENUE RESPONSABLE DES DOMMAGES INDIRECTS, CONSÉCUTIFS OU SPÉCIAUX ATTRIBUABLES À L'UTILISATION OU AU RENDEMENT DU PRODUIT. Certains états ne reconnaissent pas les restrictions ni les exclusions relatives aux dommages indirects, consécutifs ou spéciaux; il se pourrait donc que cette restriction ne s'applique pas dans votre cas. La présente garantie vous accorde des droits spécifiques, mais vous pourriez aussi avoir d'autres droits en fonction de l'état dans lequel vous résidez. Cette garantie remplace toute autre garantie donnée précédemment.

SERVICE SOUS GARANTIE Pour être admissible au service sous garantie, vous devez (a) aviser NuTone, à l'adresse fournie ci-dessous ou par téléphone au 1 800 543-3687, (b) fournir le numéro du modèle et la description de la pièce et (c) décrire la nature du défaut de la pièce ou du produit. Au moment de la demande de service sous garantie, vous devez fournir une preuve de la date d'achat originale.

Date d'installation Entrepreneur ou installateur

N° de modèle et description du produit

POUR OBTENIR DE L'ASSISTANCE OU DU SERVICE:

Pour connaître le Centre de service NuTone autorisé indépendant le plus proche:
Résidents des États-Unis continentaux, composez le numéro sans frais: 1 800 543 8687
Garder à protée de la main le numéro du modèle, la date et la preuve d'achat, le type de problème.
Résidents de l'Alaska et d'Hawaii: Écrivez à NuTone Inc. Attn: Department of National Field Service, 4820 Red Bank Road, Cincinnati Ohio USA 45227-1599.
Résidents du Canada: Écrivez à Broan-NuTone Canada, 1140 Tristar Drive, Mississauga, Ontario Canada L5T 1H9.

Rev. 03/2001

1140 Tristar Drive, Mississauga, Ontario, Canada L5T1H9 • primé aux U.S.A., Piéce Nº 85483
Product specifications subject to change without notice. • 4820 Red Bank Road, Cincinnati, Ohio 45227 • Printed in U.S.A., Rev. 05/01, Part No. 85483